



Wall-hung DVD Shelves

Jonathan Overholt, 2012

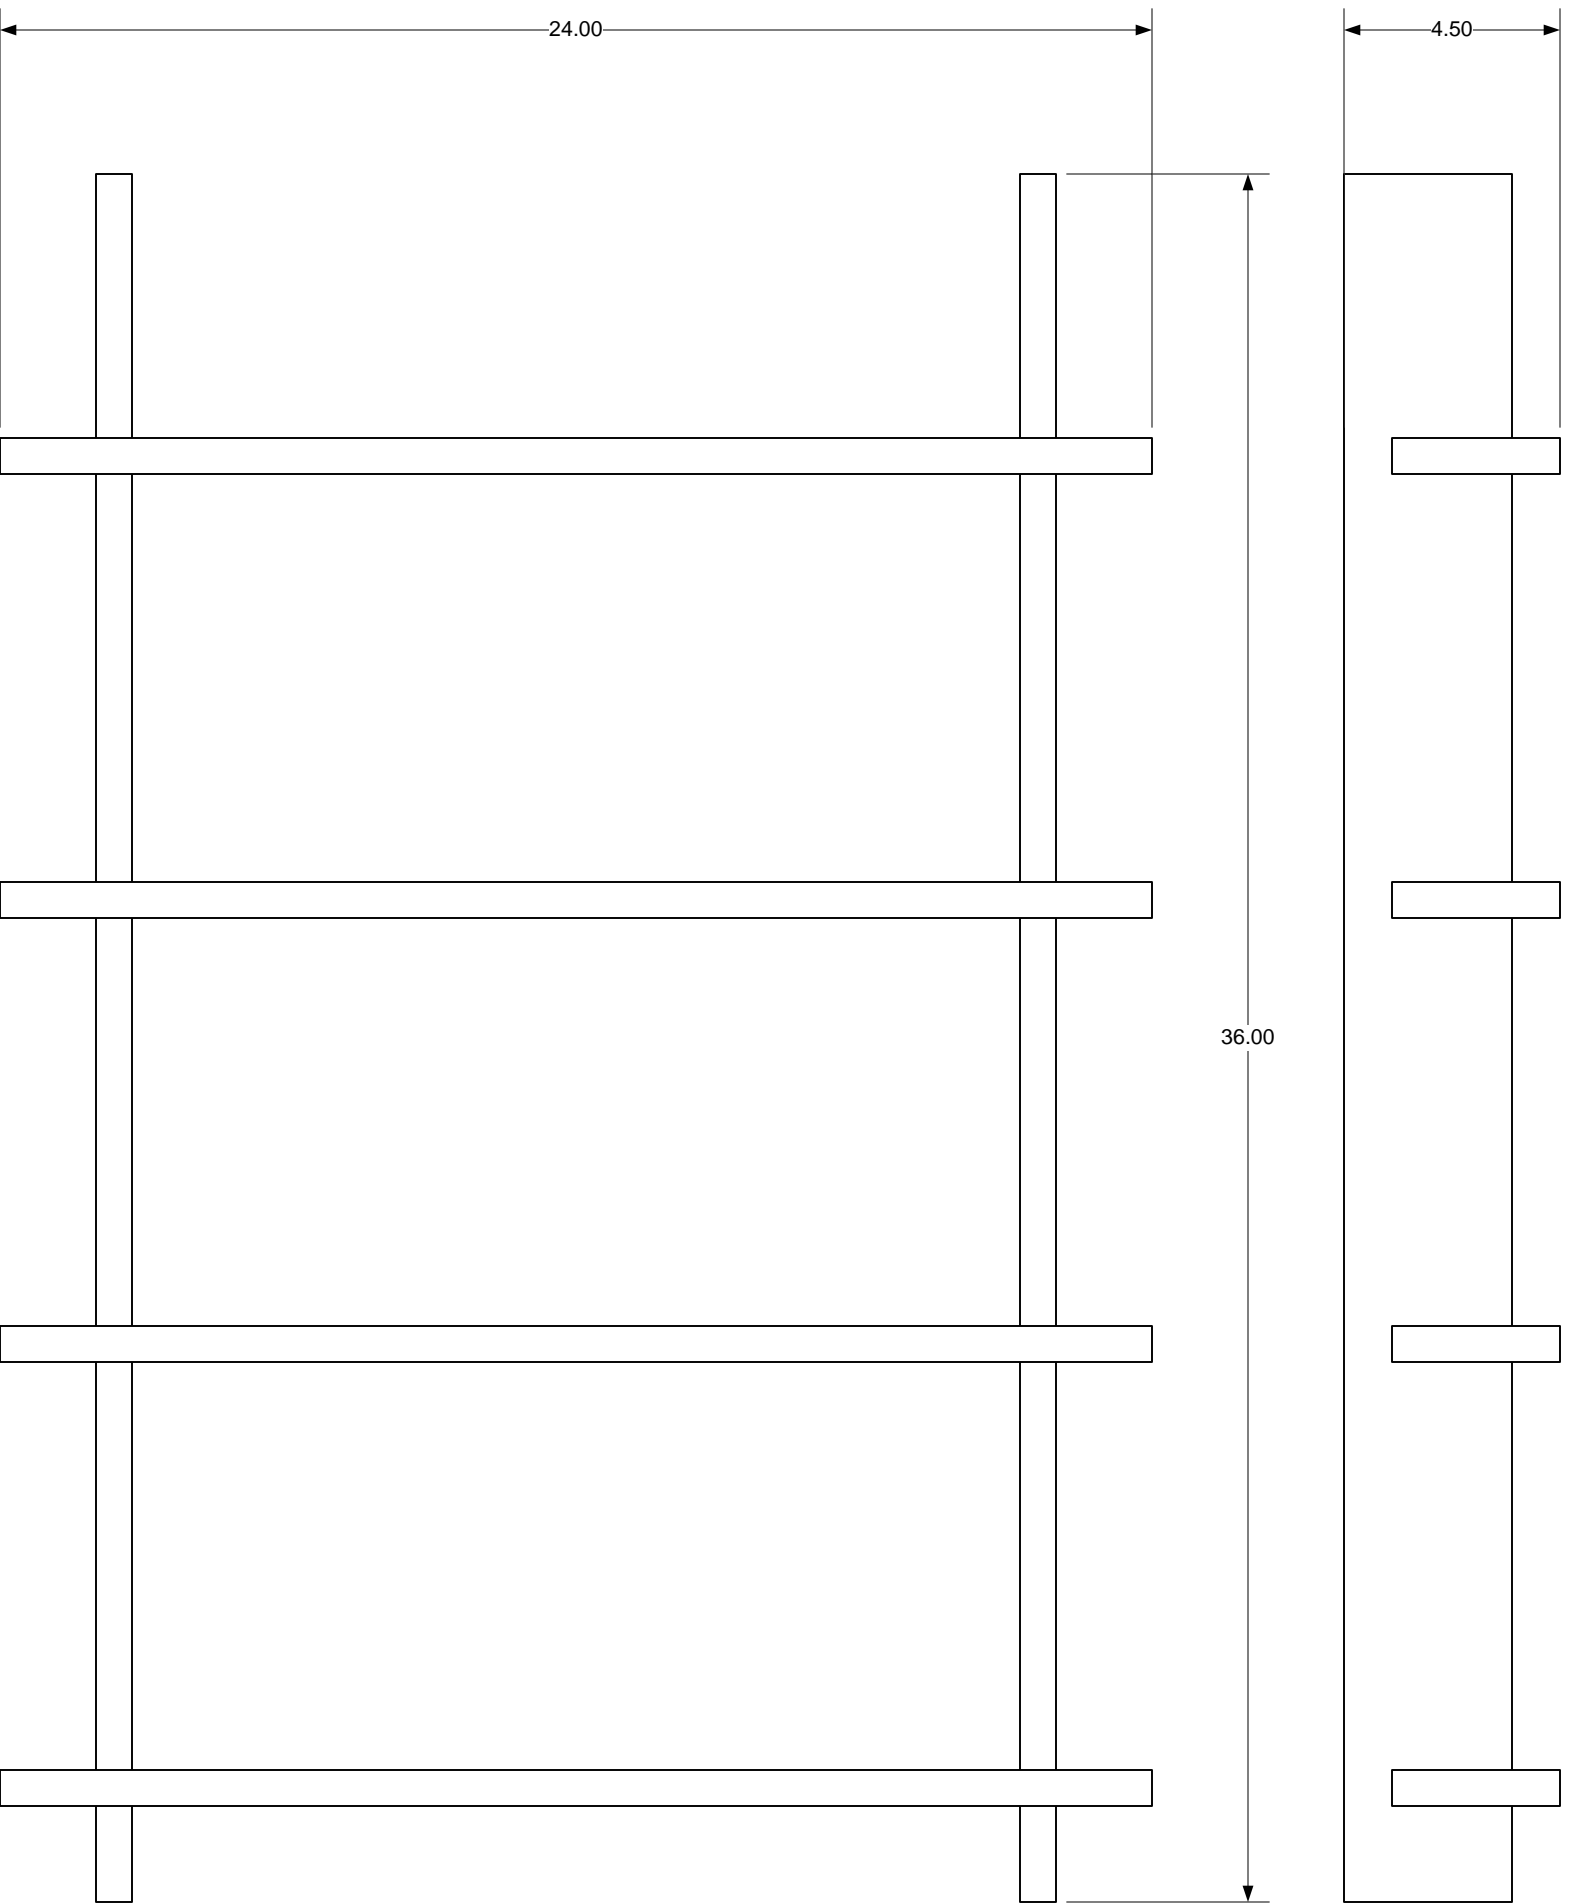


Components and Instructions

Vertical
(2)
1x4x36"

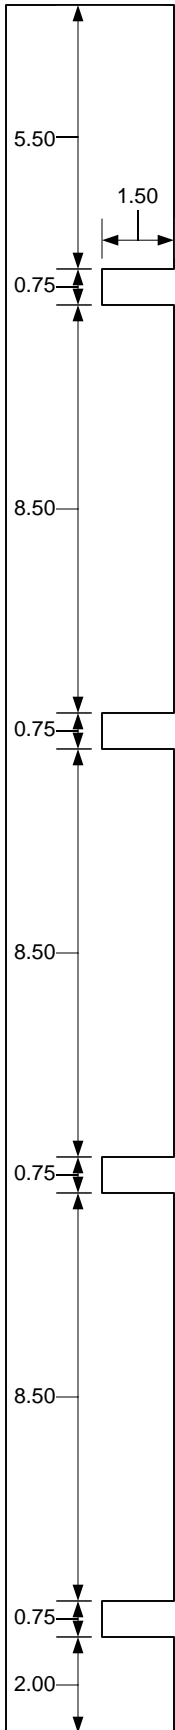

Shelf (4)
1x4x30"

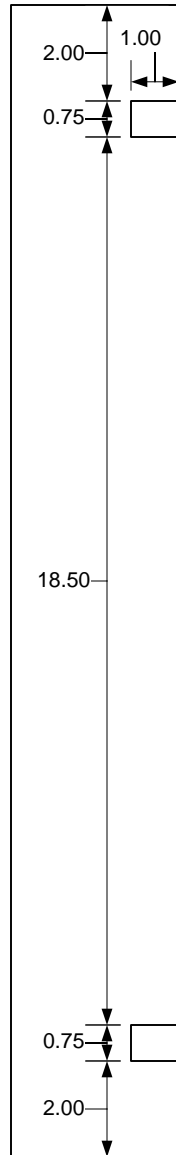

Instructions

1. Cut components as indicated left from raw lumber
2. Apply bevel to any edges as desired
3. Initial sand with 150 grit sandpaper
4. Test fit, adjust as necessary
5. Finish sand with 220 grit sandpaper
6. Final test fit
7. Route or chisel recesses in rear for wall-mounting brackets
8. Stain
Let dry for 24 hours
9. Glue and clamp all components into place
Let dry for 24 hours
10. Wood filler if necessary in joints
Let dry for 24 hours
11. Polyurethane
Let dry for 2 hours
12. Sand lightly with 220 grit sandpaper
13. Repeat steps 11 and 12 until desired finish is achieved
14. Install wall-mounting brackets

Allow to dry for at least 24 hours prior to use.

Wall-hung DVD Shelves

Jonathan Overholt, 2012

